


Changing the Aroma


P90 Combo, P90 Mattress & Power of Chi

- 1) Access the Aroma Bottles under the unit and replace.
- 2) Go to the unit's control panel.
- 3) Press and hold the **Start & Stop** buttons down together, until display shows "PR."
- 4) Press the **Stop** button until display shows "P1."
- 5) Press the **Start** button until display shows "P6."
- 6) Press the **Stop** button and display will show a number.
- 7) Hit the **Start** button 1 time so display shows "PR."
- 8) Press and hold the **Start & Stop** together until display goes to zero.
- 9) To save the changes into memory, shut off the main breaker to the unit for 30 seconds and then turn the breaker back on.
- 10) The unit is now re-set for Aroma.

P90 Combo & P90 Mattress

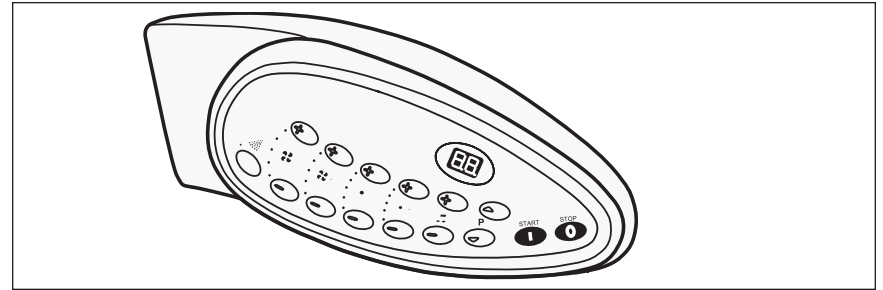

Power of Chi

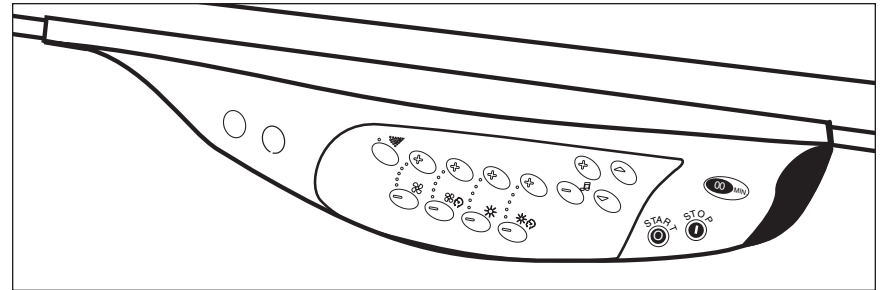

Changing the Aroma

S Class & Power For You

- 1) Access the Aroma Bottles under the unit and replace.
- 2) Go to the unit's control panel.
- 3) Press and hold **Start, Stop, Plus, Minus** buttons down together for 5–6 seconds.
- 4) Access the display. The screen shows Program Menu.
- 5) Turn the **Left Knob (B)** until the Service Menu 1 screen appears.
- 6) Continue turning the **Left Knob (B)** until the flashing cursor is in the right column across from Aroma.
- 7) Press the **Button (C)**
- 8) The hours in both the service and hours columns across from Aroma now show as 300; the Aroma hours are now reset.
- 11) Turn the **Left Knob (B)** until the Service Menu 2 screen appears.
- 12) Continue turning the **Left Knob** clockwise until the flashing cursor is next to Stop Service Menu.
- 13) Press the **Button (C)**.
- 14) The Hello Screen displays.
- 15) To save the changes into memory, shut off the main breaker to the unit for 30 seconds and then turn the breaker back on.
- 16) The unit is now re-set for Aroma.

S Class



Power For You

